9700 SERIES - ERROR MESSAGES

To assist the user in identifying problems with the spa, the system will display error messages in the lower window. These messages will be helpful when communicating with your local dealer or qualified technician if a problem should arise.



PRESSURE or FLOW SWITCH <u>ACTIVATED</u> - This error will be displayed only when the pump is not activated. Cycle the pump through Low & High speeds then off. If the error does not clear this is an indication that the pressure or flow switch is activated with no water flow.

Contact your local spa dealer



PRESSURE or FLOW SWITCH <u>NOT ACTIVATED</u> - This error will be displayed while the is pump running. Cycle the pump through Low & High speeds. If the error does not clear this is an indication that the pressure or flow switch has not activated although there is water flow.

Contact your local spa dealer



TEMPERATURE SENSOR MALFUNCTION - This error will occur when a problem with the temperature sensor exists. This error may also occur if the system is activated while the water temperature is below 35°F.

Contact your local spa dealer

OVERHEAT or HIGH-LIMIT PROTECTION - There are three(3) stages of over-temperture.



1 - The spa water has exceeded 112°F. The heater, pump and accessory will be deactivated until the water cools to 109°F. *Be sure to check the actual water temperature with an accurate thermometer.*

HL

2 - The spa water has exceeded 119°F. The heater will deactivate while the pump and accessory will still operate. The blower (if equipped) can be activated to help cool the water. WATER MUST BE BELOW 119°F AND POWER MUST BE RESET TO CLEAR THE "HL" ERROR

A dirty spa filter can also cause a restricted flow of water, be sure the filter is cleaned regularly and ensure all water shutoff valves are open.


If the system has been operating normally until now, the pump may be overheating the spa. Refer to "Programing Filtration" on page X and reduce the duration and/or number of cycles per day.

 ${\bf 3}$ - If you've eliminated items 1 & 2 as problems, the high-limit sensor may have malfunctioned.

Contact your local spa dealer

9700 SERIES - INCOMING POWER WIRING


All Universal systems leave configured 120-Volt input power (Option 1).

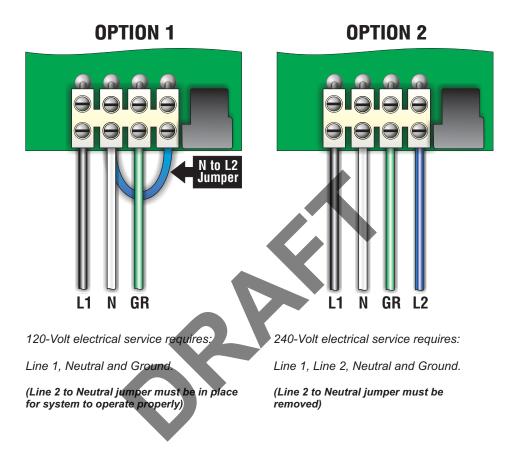


IMPORTANT: Always refer to the product data label (located on top of control box) for specific electrical information.

9700 SERIES - LOW LEVEL PROGRAMMING


It is possible to change the parameters of the system from the spaside control. All circuit presets have been programmed at the factory. Follow the procedures described below to adjust these settings.

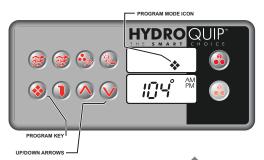

- Press & Hold the Program key for approx 20 seconds. A value of P1_X will appear in the lower window and the Program icon will appear in the upper window indicating that programming mode is active. (X = 1 or 2 in this case)
- To advance to the next setting press the Program key
- To change a setting Press the Up or Down key accordingly
- After desired changes are made press the Program key repeatedly to advance through the rest of the settings, exit the programming mode, and reset the system.

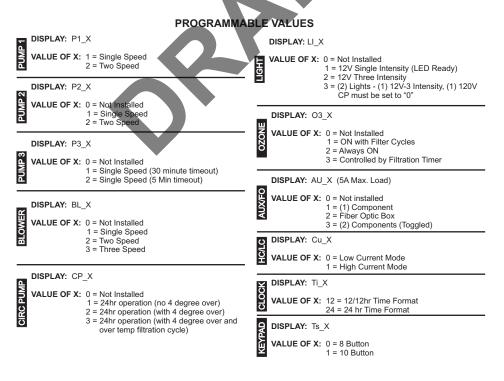

9700 SERIES - BASIC OPERATION

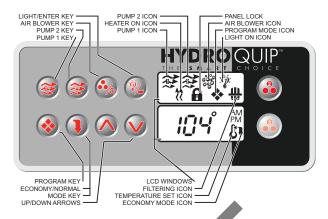



Pump 1 Key: Press this key once to turn Pump 1 on. A second press will turn it off. For dual speed pump operation; Press this key once to turn Pump 1 onto Low speed, press this key a second time to turn Pump 1 onto High speed, a third press will turn the pump off. A built-in timer will shut the pump off after 20 minutes of operation unless done so manually. The Pump 1 lcon will appear on the LCD while the pump is running in High speed and flash while it is in Low speed. If the filter icon appears, a filtration cycle has begun and you will not be able to turn the pump off.



Pump 2 Key: Press this key once to turn Pump 2 on A second press will turn it off. For dual speed pump operation; Press this key once to turn Pump 2 onto Low speed, press this key a second time to turn Pump 2 onto High speed, a third press will turn the pump off. A built-in timer will shut the pump off after 20 minutes of operation unless done so manually. The Pump 2 loon will appear while the pump is running in High speed and flash while it is in Low speed.

Air Blower Key: Press this key once to turn blower onto High speed, a second press will turn the blower onto Low speed and a third press will turn the blower off. A built-in timer will shut the pump off after 20 minutes of operation unless done so manually. The Accessory Icon will appear while the blower is running in High speed and flash while it is in Low speed.



Light Key: Press this key to turn the light onto its highest intensity, a second press will turn the light onto low and a third press will turn it off. The light will automatically shut off after 2 hours. The Light loon will appear while the light is on.

Temperature Set Keys: Press the Up arrow key to increase the desired temperature. Press the Down arrow key to decrease the temperature. The temperature can be adjusted in 1F increments from 59F to 104F (5C to 40C). The new setting will remain on the display for 5 seconds as a confirmation. During this time the Set Point icon will be appear to let you know this is the desired and not the actual temperature. After 5 seconds the display will return to the current temperature reading. When the temperature drops to 1F below the set temperature, the heater will be turned on until the temperature is 1F above the set temperature. The heater icon will appear while the heater is on and flash when there is a call for heat and the heater has not yet been activated.



Programming Parameters: There are several Filtration parameters that may be programmed. Follow these procedures to set each parameter: Press and hold the Program Key for 5-seconds, the Program icon (�) will appear. You may continue to press the Program key to access the desired Filtration parameter to be modified. Once you have reached the parameter to be modified, press the Enter (Light) key. Use the Up & Down Arrow keys to adjust the value. If no key has been pressed for 15-seconds the programming mode is exited. During programming all keys other than the Program, Enter (Light) & Down Arrow keys will be ignored. Refer to the owners manual for specific filtration and economy programming details.